


**How to Adjust Power on MC3330XR RFID Scanner**


1. Open the AssetWorx app. This is the main screen.

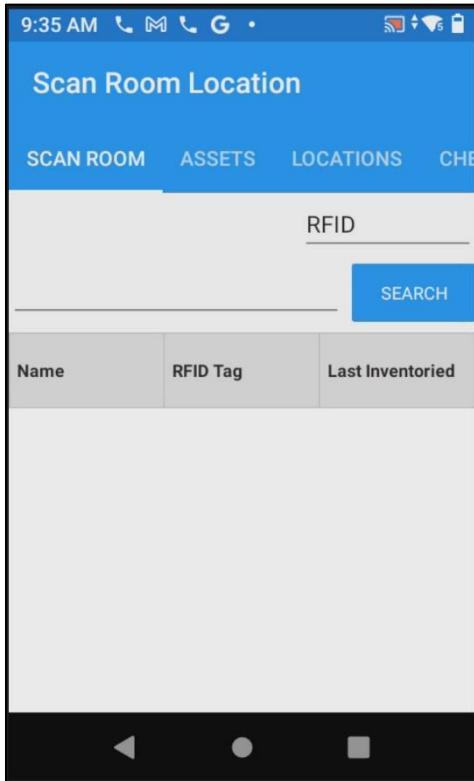


2. Swipe left to “MORE”.



3. Swipe up until you see the option “APP SETTINGS.” Tap it.

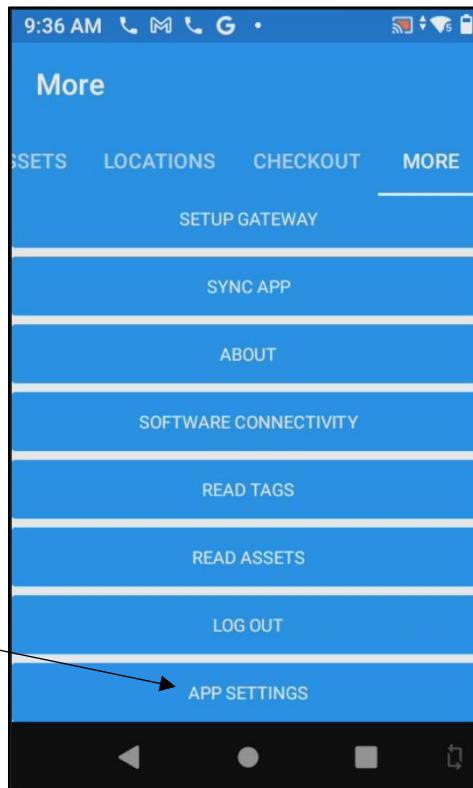

4. Tap the number below “Inventory Power Level (1-100):”. Type the desired RFID power level.

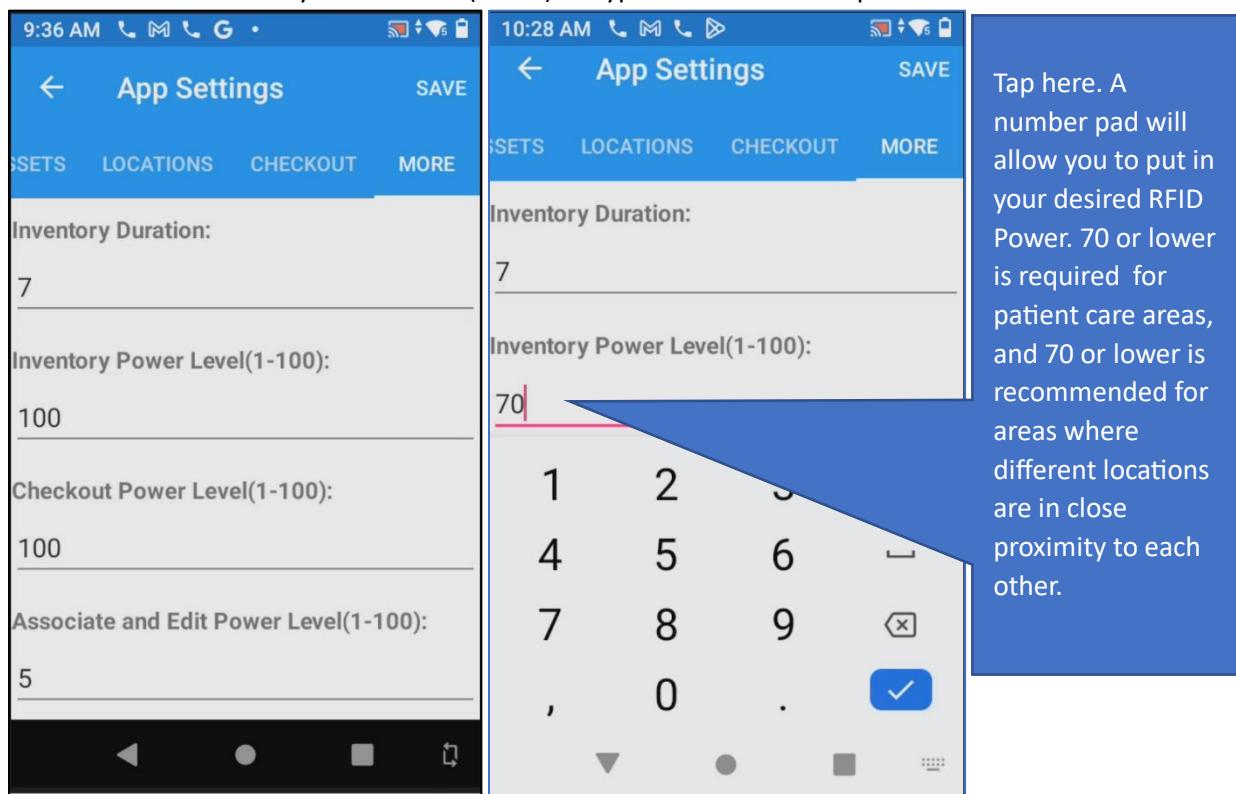

5. Tap “SAVE” in the upper right-hand corner. It will say “Settings updated.” You may continue to use the reader now.

